

SafeCare Installation Instructions

Wall Mount - Countersunk Pin-In-Head Torx Fastener


This mount is intended for wall mounting on surfaces such as drywall, wood, plaster, brick or other rough and/or repairable surfaces using silastic or polyurethane construction adhesive and countersunk pin-in-head Torx fasteners.

1. Using sign as a template, position on wall and mark location of holes with pencil.
2. Remove sign and drill 3/16" holes in wall at marked locations.
3. Install provided white Alligator anchors.
4. Apply adhesive liberally to back of sign per drawing below. 2/90 recommends Loctite Power Grab Clear Construction Adhesive (not supplied by 2/90).
5. Install sign on wall using bit TR15 Torx with #8 x 1.25 countersunk pin-in-head Torx fastener.
6. Wipe any excess adhesive from around sign before it dries.

Note: It is very important to install signs with the hardware provided by 2/90 Sign Systems.

If there are any questions regarding installation, please contact 2/90's Technical Support Department at 800.777.4310.

Typical Applications:

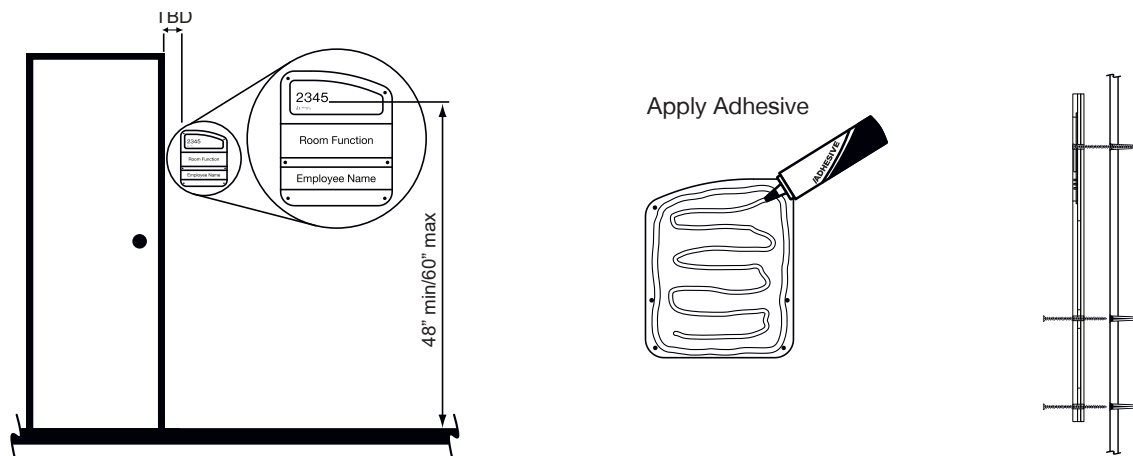

IMPORTANT: Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

Customer is responsible for suitability of each mounting option. Testing is recommended prior to each use.

1.2020