



# BEHAVIORAL SAFETY

## INNOVATION NEVER RESTS

### A/C CONVERSION KIT FOR SF470 and SF500 SENSOR FAUCETS

#RPG-SF500-10


120VAC to 5.9VDC

#### Specifications

- **INPUT:**  
100-240V-50/60Hz 0.3A
- **OUTPUT:**  
5.9V DC - 1.0A




#### Dimensions

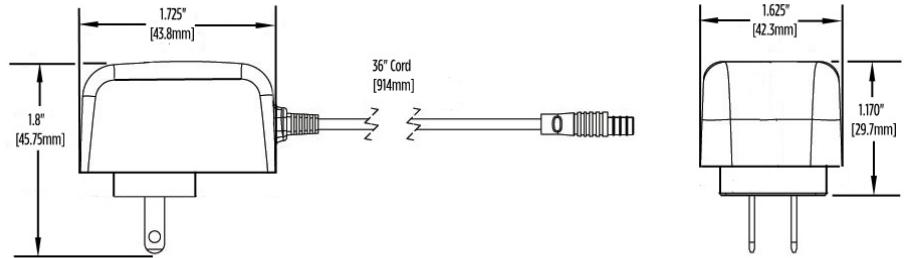


**IMPORTANT:** Be sure to read instructions thoroughly before beginning installation.

#### Installation Instructions


Step 1: Loosen the screw and push the battery box cover to the right to open.

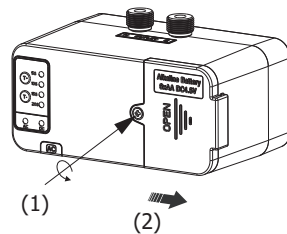

Step 2: Remove the batteries.

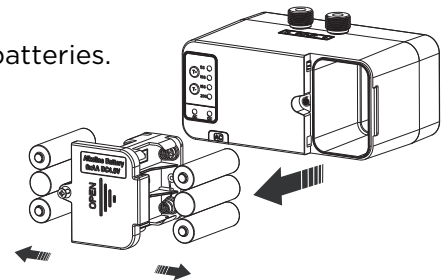

Step 3: Put the battery holder back into the solenoid housing and push the battery box cover to the left and then lock the cover with the screw.

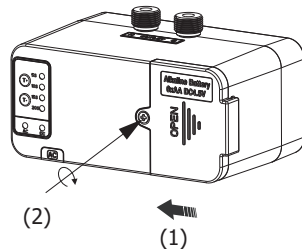

Step 4: Open the AC adapter cover on the solenoid body (1) (Shown separated for clarity). Connect the A/C Adapter to the solenoid body (2). Plug the A/C Adapter into the wall outlet. The A/C light (3) will illuminate.

