

LIGATURE RESISTANT RECESSED SHELF

#RS780


Installation, Maintenance & Operation Instructions

This suicide resistant Recessed Shelf creates storage space while substantially reducing ligature risk normally associated with standard shelving. It is front mounted for ease of installation. It is composed of stainless steel with white powder coated surfaces. All corners are ground and pre-drilled for mounting. Dimensions are 17"W x 8"H flange, 14"W x 5"H inside dimensions, 4"D.

Specifications

- Stainless steel construction
- White powder coat exterior
- Mounted from front of wall
- Flanged edge for uniform mounting
- Unit secured with tamper resistant stainless steel screws

Rough-In Dimensions

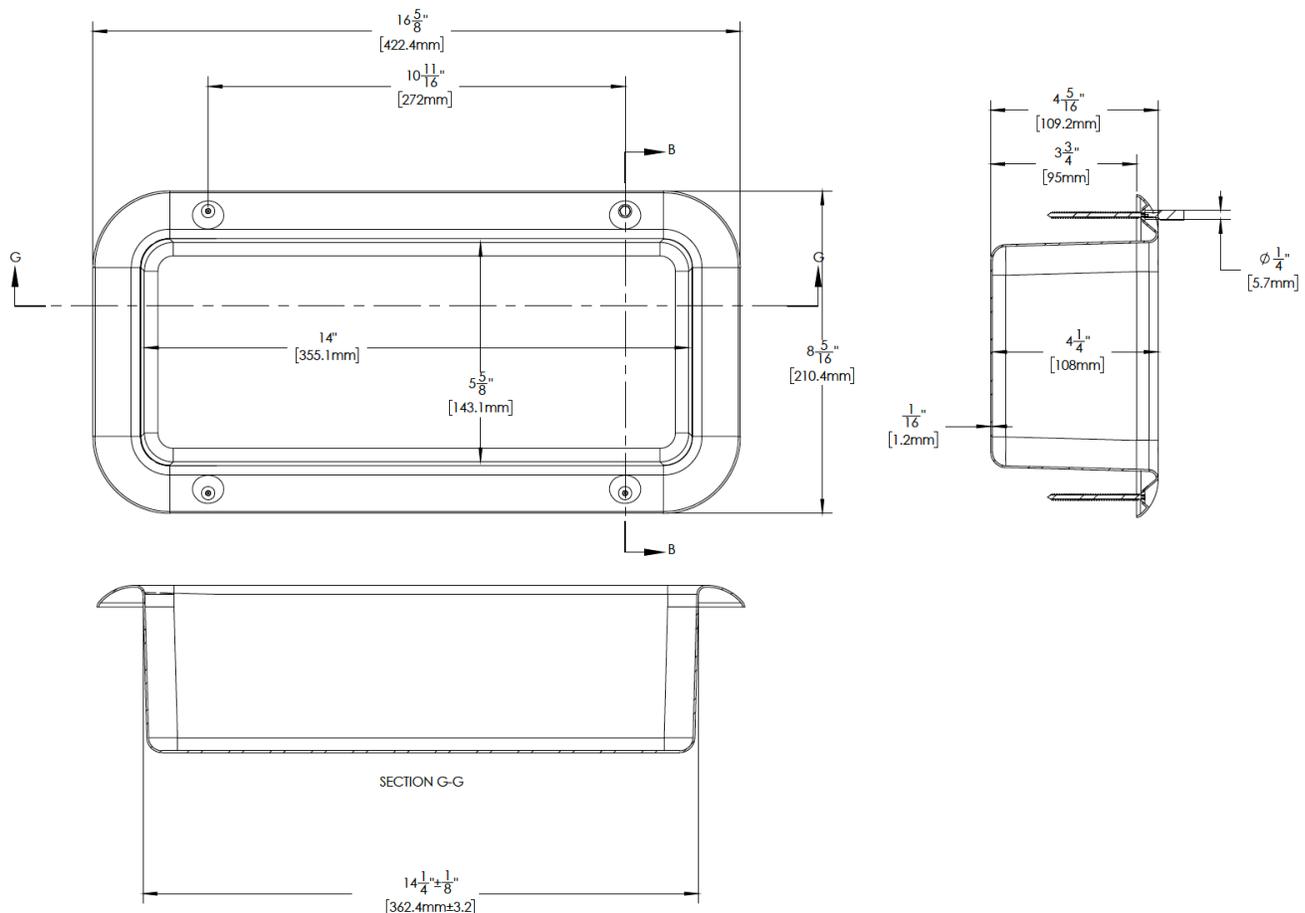

IMPORTANT


- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

Tools and Supplies




Installation Instructions

1. Determine desired mounting position of the Ligature Resistant Recessed Shelf. Ensure mounting location and structure within the wall cavity is capable of supporting the product in use. Measure and cut out wall opening using appropriate tools.

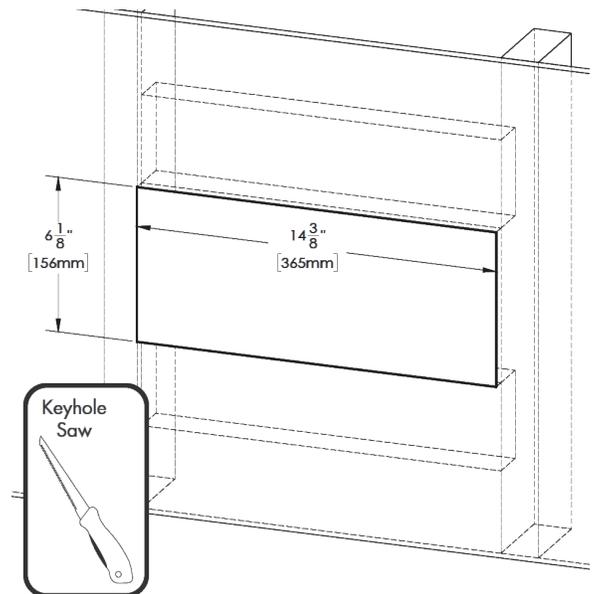

2. Insert the Ligature Resistant Recessed Shelf into the opening. Verify that the Ligature Resistant Recessed Shelf sits level within the opening. If it doesn't fit, adjust the hole opening.

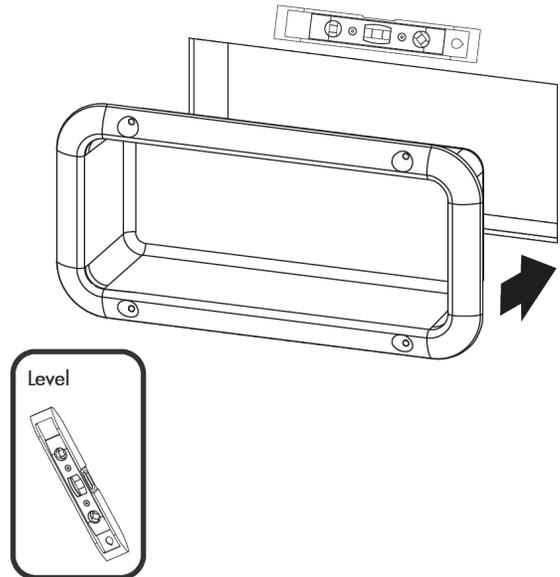


3. Install supplied Mounting Hardware through the four (4) mounting locations using the supplied Torx Bit tool into a secure brace (supplied by installer) or into wall. This will support the Ligature Resistant Recessed shelf. Ensure the mounting structure and mounting hardware can safely support the product in use.

NOTE

If mounting on drywall and not to stud, use the appropriate anchors and fasteners for application. Recommend screw in easy anchor or equal for drywall.

Make sure the screws sit flush to 1/64" below mounting surface.

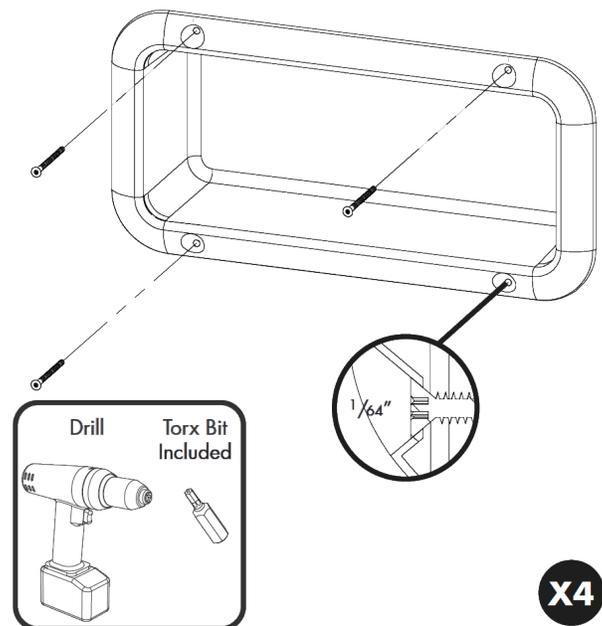

X4

Care & Cleaning

Your new Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners.

Waiver & Disclaimer

This waiver-disclaimer is attached to and made a part of the written contract to purchase these products for use in psychiatric and correctional facilities. Such fixtures and products are purchased to reduce the risk of self-imposed death or injury to patients or clients in such facilities, but are NOT represented as able to prevent such death or injury.

Behavioral Safety Products, LLC (“BSP”) as the seller and Speakman Company as the manufacturer of these products have not, and will not represent or warrant to the purchaser shown in this contract (“Purchaser”) that its fixtures and products will prevent death or injury in any case whatsoever.

BSP and Speakman Company make no express or implied warranty with respect to the preventative quality of its products, but merely represent that the use of such products tends to reduce deaths and injuries by patients or clients who are subject to meticulous screening processes and diligent supervision on the part of the facility housing them.

Purchaser acknowledges the foregoing disclaimer and waives any and all claims against BSP and Speakman Company as to express or implied warranties of fitness for any purpose whatsoever.

IMPORTANT

- Do not over tighten any connections or damage may occur
- Be sure to read instructions thoroughly before beginning installation.

Care & Cleaning

Your new Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners.

Waiver & Disclaimer

This waiver-disclaimer is attached to and made a part of the written contract to purchase these products for use in psychiatric and correctional facilities. Such fixtures and products are purchased to reduce the risk of self-imposed death or injury to patients or clients in such facilities, but are NOT represented as able to prevent such death or injury.

Behavioral Safety Products, LLC (“BSP”) as the seller and Speakman Company as the manufacturer of these products have not, and will not represent or warrant to the purchaser shown in this contract (“Purchaser”) that its fixtures and products will prevent death or injury in any case whatsoever.

BSP and Speakman Company make no express or implied warranty with respect to the preventative quality of its products, but merely represent that the use of such products tends to reduce deaths and injuries by patients or clients who are subject to meticulous screening processes and diligent supervision on the part of the facility housing them.

Purchaser acknowledges the foregoing disclaimer and waives any and all claims against BSP and Speakman Company as to express or implied warranties of fitness for any purpose whatsoever.

IMPORTANT

- Do not over tighten any connections or damage may occur
- Be sure to read instructions thoroughly before beginning installation.