



BEHAVIORAL SAFETY

INNOVATION NEVER RESTS

LIGATURE RESISTANT PAPER TOWEL DISPENSER

#PH235

The patented PH235 Ligature Resistant Paper Towel Dispenser is ideal for patient bathrooms and public areas in behavioral healthcare settings that require ligature-resistant products. Providing behavioral patients with our modern, Ligature Resistant Paper Towel Dispenser can help to ensure that your facility remains a little bit cleaner and safe.

While the old, recessed "shelf style" paper towel holders have had their purpose and merit, they can create an unsanitary environment whereby patients can remove the entire supply of paper towels at one time. This ease of access to the whole paper towel supply presents a much greater risk of a patient using the paper towels to stop toilets or litter the bathroom.

The PH235 Ligature Resistant Paper Towel Holder is a new edition to Behavioral Safety. The PH235 can hold up 6.5" diameter x 8.5" tall "center pull" paper towel rolls and is excellent for ADA bathrooms that require an open & spacious area. The PH235 fully encapsulates a paper towel roll which ensures sanitary use. The unit is surface-mounted, significantly reducing installation time. The unit comprises a 1/8 inch polycarbonate frosted front cover and transparent viewing window for staff inspection. The conical, ligature-resistant outlet of the dispenser allows patients to tear paper towels cleanly. This feature can minimize waste and helps prevent the stashing of contraband. The PH235 dispenser includes mounting hardware and can be retrofitted to existing rooms or installed in new facilities.

Compatible Paper Towel Rolls

- U-Line EzPull Junior S-13796
- Medline NON26836
- Boardwalk BWK6405

Other towels may be suitable if they meet size requirements.



Specifications


- Patented ligature resistant design.
- Viewing window to the interior for staff inspection of the paper roll.
- Accepts 6" diameter center pull paper towel rolls with up to 600 sheet capacity.
- Constructed of 1/8" polycarbonate for strength.
- Locks with a barrel lock and circular key for tamper resistance and ease of maintenance.
- Meets ADA standards when installed per manufacturer's instructions.
- Comes with tamper resistant mounting hardware to attach to the wall in either new or or existing buildings.

Installation, Maintenance & Operation Instructions


IMPORTANT:

- The dispenser must be caulked to the wall surface with pick resistant caulk after installation.
- Be sure to read instructions thoroughly before beginning installation.

Tools: (BSP does not recommend use of impact drivers with any of it's product due to possible damage to product)

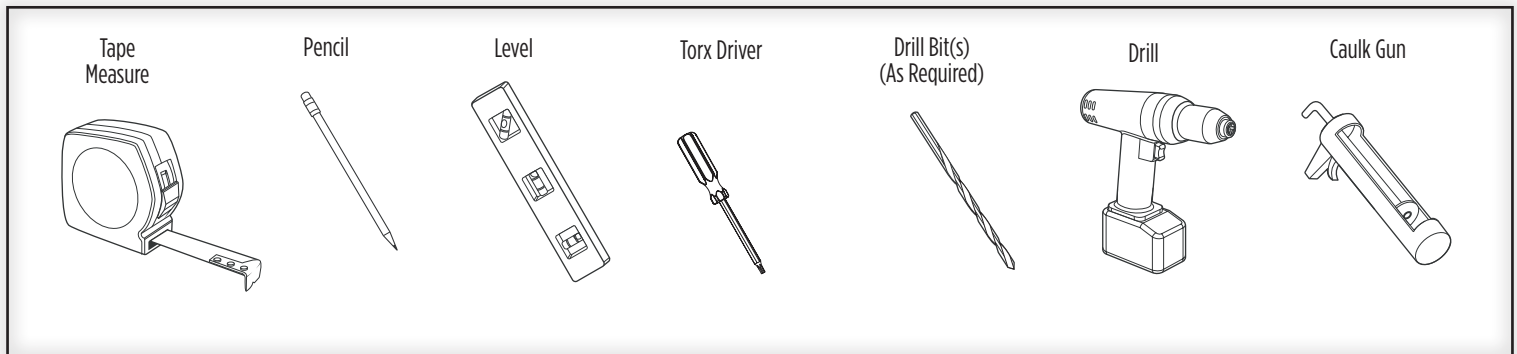

Supplies:

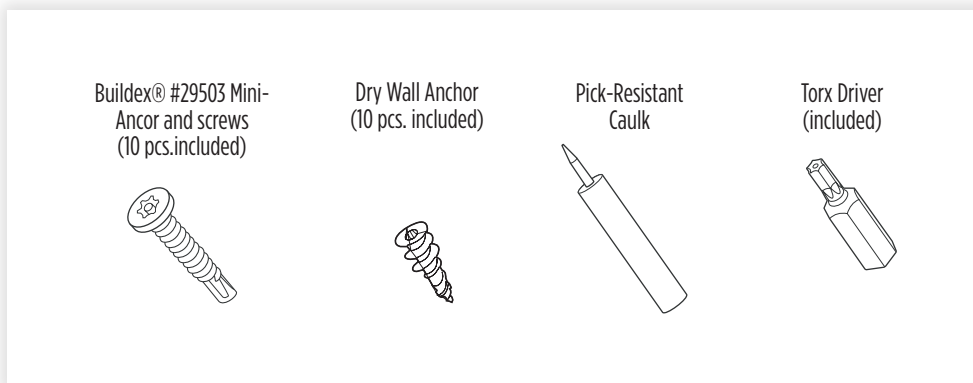


1 Install the Cover


IMPORTANT: Check the location of all electrical wires and plumbing inside the wall where the paper towel dispenser will be installed. Clearly mark their location to ensure clearance during installation. Disconnect power before beginning installation.

1. On the wall where the dispenser is to be mounted, trace the 10 screw locations shown using the dispenser as a template.

Note: Be sure to check ADA and local requirements for mounting location compliance.

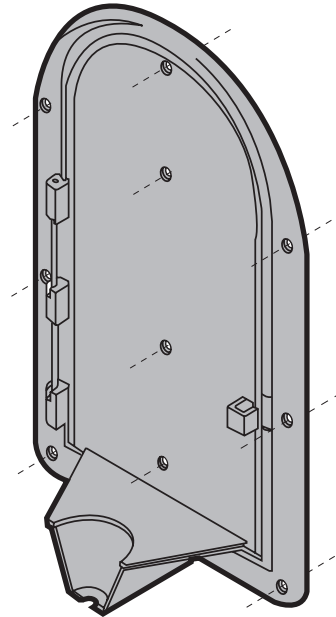


2. Drill the 10 marked holes using a 1/8" (3mm) drill. For locations that do not hit studs, re-drill the holes using 1/4" (6mm) drill.
3. Install the supplied dry wall anchors into the wall using a Phillips screwdriver (do not over tighten)
4. Fit the dispenser back onto the wall and install 10 mounting screws into the drywall anchors.
5. **IMPORTANT:** After installation, caulk all edges with pick-free caulk!

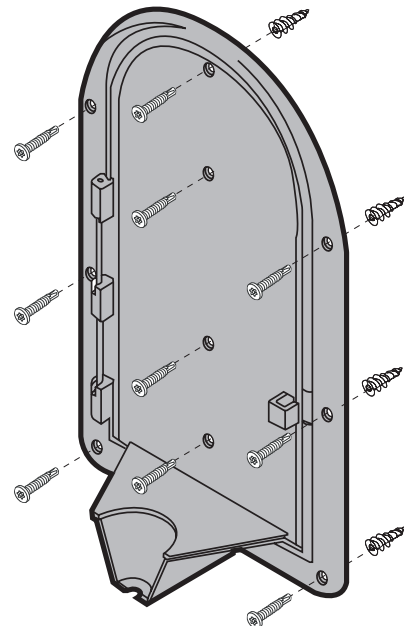

LOADING THE DISPENSER:


1. Unlock the dispenser using the key.

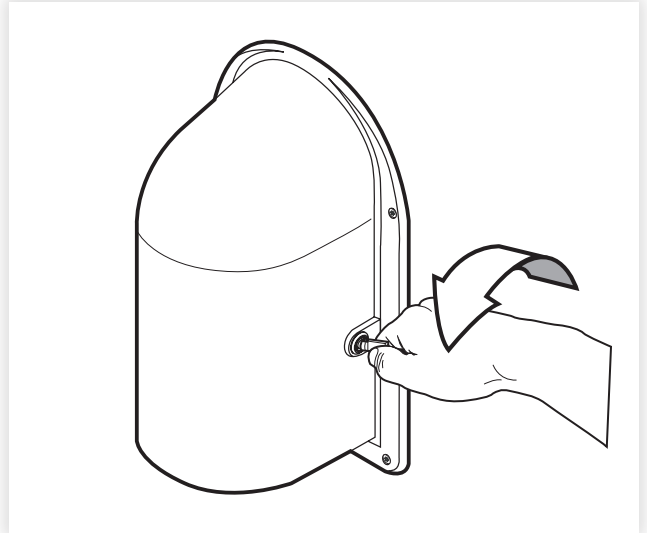


2. Open the cover.




3. Follow the paper towel manufacturer's installation instructions to prepare the paper towels for installation into the dispenser.

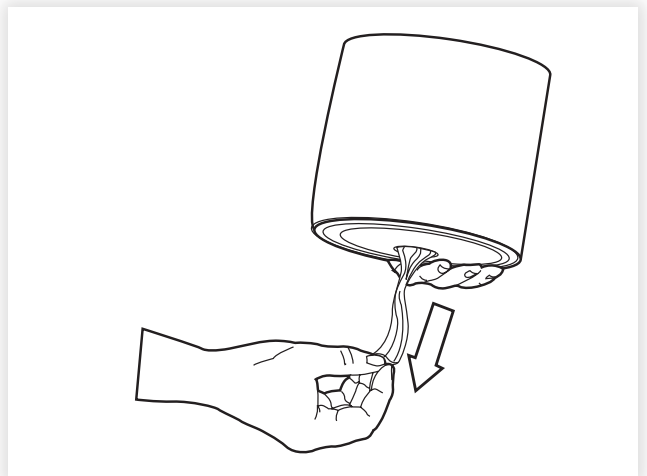


4. Place the roll of towels in the dispenser as shown. Make sure that the end of the paper towels extends below the dispenser funnel.

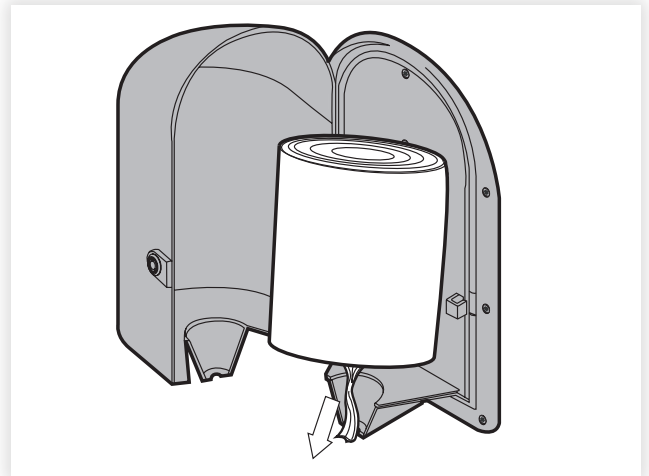

5. Push the roll into the door and close the cover. Check to ensure paper towel is not pinched between cover and base.

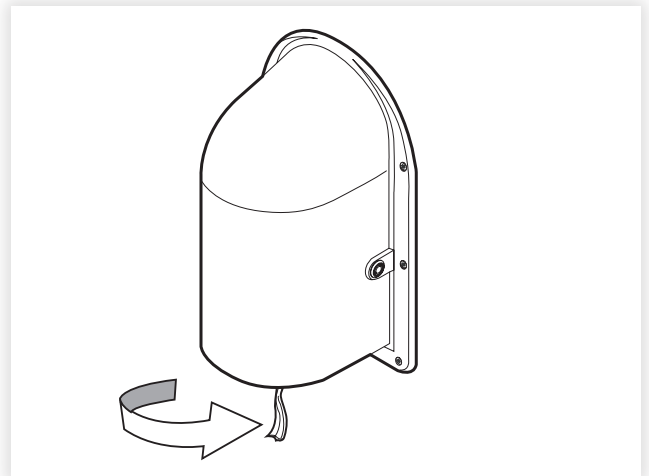

6. Lock the dispenser using the key. Remove first paper towel to check proper feed.

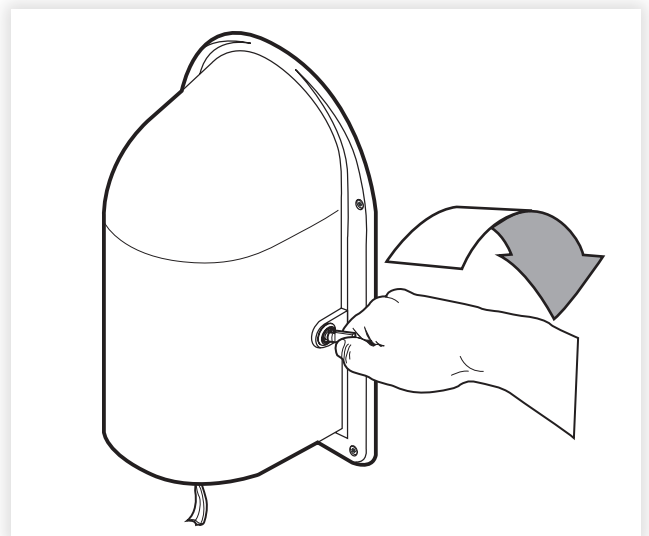

TROUBLESHOOTING:

If paper towel does not feed:

- Be sure paper towel is not being “pinched” by the cover.
- Ensure the paper towel is not bunched inside the paper towel roll.

CARE & CLEANING:

- Your Paper Towel Dispenser is designed and engineered in accordance with the highest quality and performance standards. With proper care, it will provide years of hygienic and trouble-free service.
- NEVER use abrasive cleaners, chemicals, alcohol or other solvents as they may damage the finish.
- Periodically clean the surfaces using mild soap and warm water.
- Dry immediately with a soft, clean cloth for best results.

IMPORTANT:

- This fixture must be mounted on the wall. The mounting flanges must be flush with the outer wall surface and must be CAULKED WITH PICK-RESISTANT CAULK.

WAIVER AND DISCLAIMER:

This waiver-disclaimer is attached to and made a part of the written contract to purchase these products for use in psychiatric and correctional facilities. Such fixtures and products are purchased to reduce the risk of self-imposed death or injury to patients or clients in such facilities, but are NOT represented as able to prevent such death or injury.

Behavioral Safety Products, LLC (“BSP”) as the seller of these products have not, and will not represent or warrant to the purchaser shown in this contract (“Purchaser”) that its fixtures and products will prevent death or injury in any case whatsoever.

BSP makes no express or implied warranty with respect to the preventative quality of its products, but merely represents that the use of such products tends to reduce deaths and injuries by patients or clients who are subject to meticulous screening processes and diligent supervision on the part of the facility housing them.

Purchaser acknowledges the foregoing disclaimer and waives any and all claims against BSP as to expressed or implied warranties of fitness for any purpose whatsoever.