

LIGATURE RESISTANT UNIVERSAL WALL FIXTURE COVER #TM265

Our patented ligature resistant Universal Wall Fixture Cover is designed to maintain secure conditions in behavioral hospital settings where ligature resistance is a concern.

We designed the TM265 Universal Wall Fixture Cover with a clean modern aesthetics that features sloped faces and sides to minimize ligature points. Like our TM260 ligature resistant thermostat cover, but with a larger footprint to cover larger wall fixtures, the TM265 provides a face and function which has not yet been offered to the behavioral industry. The specially designed air circulation openings allow free air flow while offering resistance to possible ligature. When installed with the included hardware, the base fits snugly against the wall and when mounted with pick-free caulk the sloped base discourages ligature.


Constructed of 1/8" polycarbonate for abuse resistance, the unit locks with barrel locks and circular key for tamper resistance, and ease of access. The TM2650 may also be used to cover other wall fixtures requiring security such as electrical outlets, cable connections, O2 connections or light switches and can be mounted either vertically or horizontally.

The cover includes mounting hardware and can be retrofitted to existing rooms or installed in new facilities.

Behavioral Safety Products fixtures are thoughtfully designed and engineered in accordance with the highest quality materials and performance standards for the behavioral industry.


Specifications:

- Patented design.
- Sloped faces to prevent ligature points.
- Constructed of 1/8" impact resistant polycarbonate for abuse resistance.
- Locks with a barrel locks and circular key for tamper resistance, and ease of maintenance.
- Comes with mounting hardware to attach it to the wall in either new or existing buildings.
- Sized to fit various wall fixtures.
- Can be mounted vertically or horizontally.

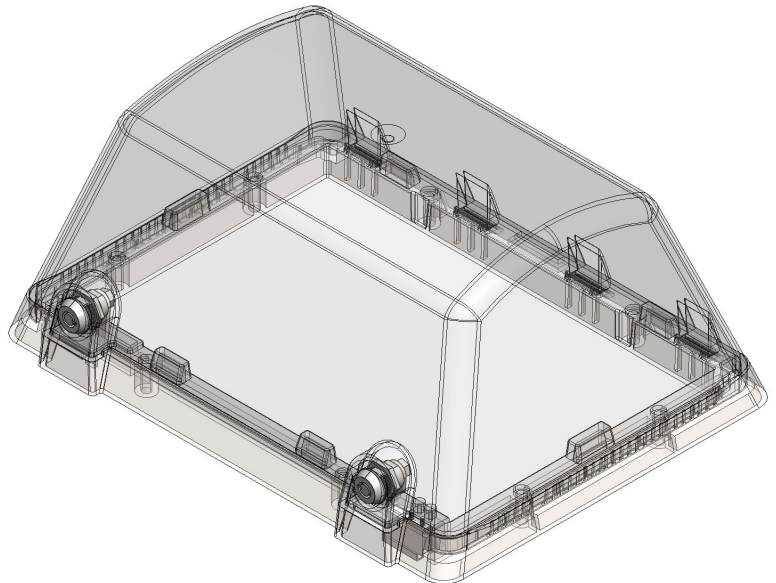

Installation, Maintenance & Operation Instructions

Tools and Supplies:

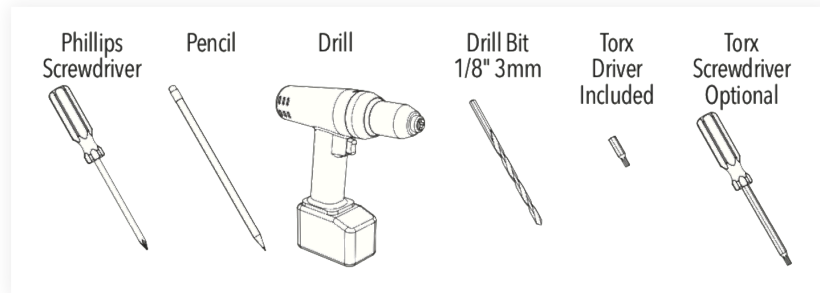

Installation Instructions


- Be sure to read instructions thoroughly before beginning installation.

IMPORTANT


Electric shock hazard! Check location of electrical wires inside of the wall for clearance and disconnect power before installation.
Do not over-tighten any connections or damage may occur.

1. Place the base of the TM265 Universal Wall Fixture Cover over the installed fixture (or other fixture to be covered) and center it in the opening. The cover can be mounted either vertically or horizontally.


CAUTION: If mounted horizontally the locks must be at the bottom.

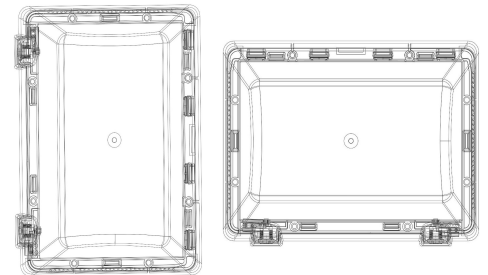

2. Using the base as a template mark the 8 mounting hole locations on the wall.
3. Drill eight 1/8" (3mm) holes in the locations marked.
4. Using a Phillips screwdriver, screw the drywall inserts into any holes that do not contact studs until they are flush with the surface. Do not over tighten!

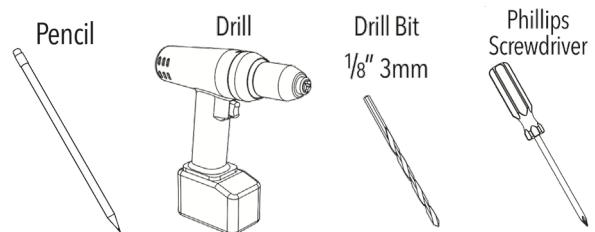

5. Using the supplied screws and Torx driver mount the base to the wall with the lock steps in the desired direction. **Caulk around the base with pick-free caulk.**

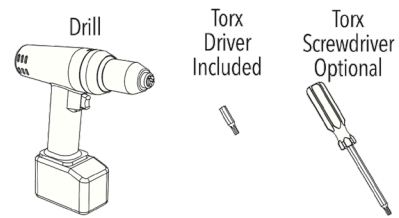

CAUTION: If mounted horizontally the locks must be at the bottom.

Operation Instructions:

- Once the base is mounted to the wall fit the tabs on the cover into the openings on the base with the lock facing towards the lock step. **NOTE:** The cover will only attach one way to the base and allow closing.
- Rotate the cover toward the lock step and turn the key clockwise to lock. Be sure the lock is in the locked position.
- To unlock the cover, turn the key counter clockwise and slide the cover open by pushing the cover sideways. **NOTE:** The key cannot be removed from the lock unless it is in the locked position.

Care & Cleaning

- Your Thermostat/Universal Wall Cover is designed and engineered in accordance with the highest quality and performance standards. With proper care, it will provide years of trouble-free service.
 - Periodically clean the exterior surfaces using mild soap and warm water.
 - Dry immediately with a soft, clean cloth for best results.
 - NEVER use abrasive cleaners, chemicals, alcohol or other solvents as they may damage the surfaces of the cover.

Waiver & Disclaimer

This waiver-disclaimer is attached to and made a part of the written contract to purchase these products for use in psychiatric and correctional facilities. Such fixtures and products are purchased to reduce the risk of self-imposed death or injury to patients or clients in such facilities, but are NOT represented as able to prevent such death or injury. Behavioral Safety Products, LLC ("BSP") as the seller of these products have not, and will not represent or warrant to the purchaser shown in this contract ("Purchaser") that its fixtures and products will prevent death or injury in any case whatsoever.

BSP makes no express or implied warranty with respect to the preventative quality of its products, but merely represent that the use of such products tends to reduce deaths and injuries by patients or clients who are subject to meticulous screening processes and diligent supervision on the part of the facility housing them.

Purchaser acknowledges the foregoing disclaimer and waives any and all claims against BSP as to express or implied warranties of fitness for any purpose whatsoever.

IMPORTANT

For ligature resistance this fixture must be mounted with its base flush to the wall and **CAULKED WITH PICK-FREE CAULK.**